


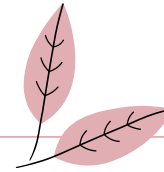


SIMPLY GLOSS EXPRESS LIGHT

Instruction Guide

Set Includes



- 1.** Express Light **2.** Main body **3.** Infrared sensor **4.** LED lights **5.** LCD digital display screen
6. Mode selection button **7.** 10 second time control **8.** 30 second time control **9.** 60 second time control **10.** Power supply connection / power port **11.** AC/DC Adaptor **12.** Power cord
13. Removable base plate

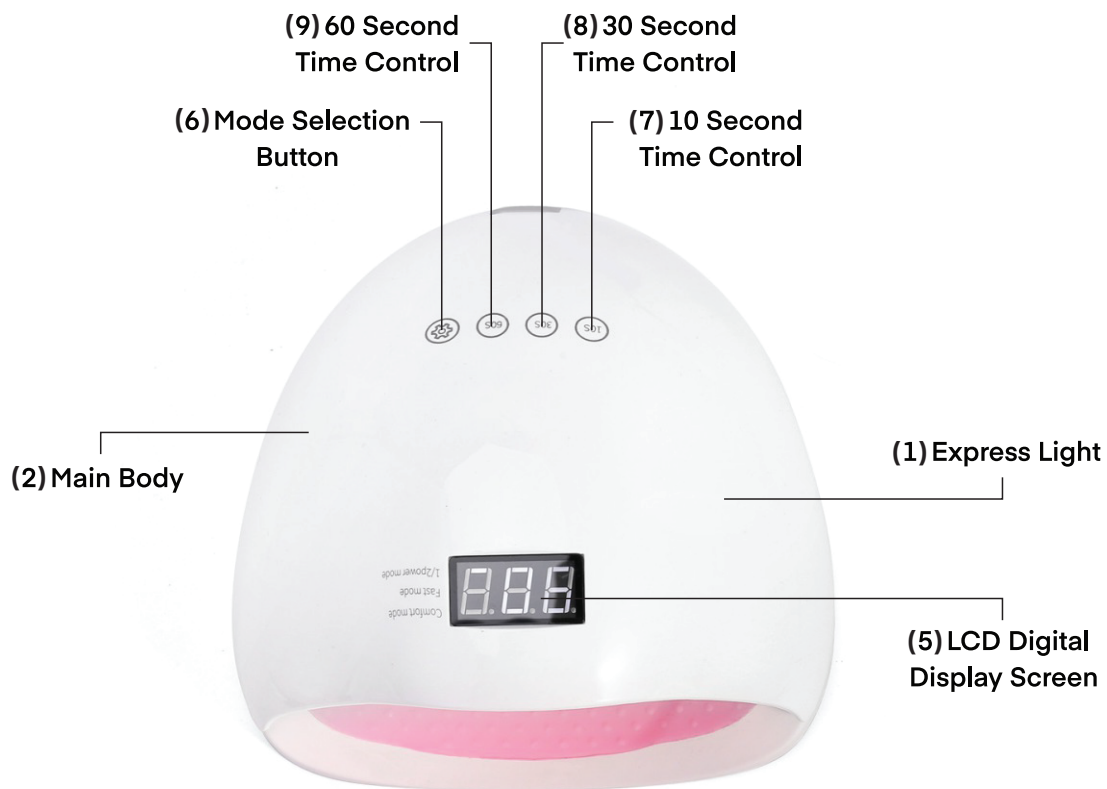

Technical Specifications:

- 24 x Individual LED Lights
- Maximum Power Consumption 48W
- AC Input 100-240V 50/60HZ
- Size: 215x213x110mm
- LED Wavelength: 365+395-405mm

Made in China

Warranty:

The Express Light is covered by a 1 year limited warranty. Simply Billie warrants this product to the original purchaser to be free from defects in material and workmanship under normal use for a period of 1 year from date of purchase with the exception of the LEDs. During the warranty period, this product will be repaired or replaced at our option, without charge for either parts or labour at our repair/parts centre. The warranty does not apply if product is misused, abused or altered. Without limiting the foregoing, dropping of unit, visible cracking or chipping of the Express Light are presumed to be defects resulting from misuse or abuse. Warranty only applies if this product is used in accordance with the factory directions accompanying it.



Operating Instructions

1. Remove the Express Light from the box and place on a hard surface.
2. Remove any packaging material inside and around the Express Light
3. Connect the AC/DC Adaptor (11) and power cord (12) – plug the jack end of the AC/DC Adaptor into the port (10) at the back of the Express Light. Plug the Power cord into a wall outlet. Turn on power at power point.
4. LCD digital display screen (5) will light up
5. Touch Mode selection button (6) to select mode. Generally work at 'Fast' Mode.
6. Touch Time control button (7, 8, 9) to set desired time
7. Infrared sensor (3) automatically senses hand entering and leaving the light

Directions

Once gel coat has been applied, slide hand into light, then spread fingers. Light automatically comes on when infrared sensor is triggered

Heat sensation can occur due to individual sensitivity, but is most likely caused by the thickness of gel applied (Always apply gel in thin coats). Pulling

fingers away from the Express Light for a few seconds will cease the heat sensation.

For foot use, disconnect the base from the Express Light by gently separating the magnets (13). This allows plenty of room to put whole foot under the light.

Cleaning the Express Light:

Disconnect the power cord from the wall outlet

Clean outside of Express Light with a soft, damp cloth

Remove base and top of the Express Light by pulling apart the magnets that

hold them together. Disinfect pink hand pad base with Isopropyl Alcohol

DO NOT clean with abrasive cleansers or other scrubbing / scouring tools

Safety Precautions

Read instructions fully before use

Always use the correct power voltage

Never allow any liquid to enter into or around the Express Light

DO NOT use if the power cord is damaged in any way

DO NOT operate Express Light in excess of 600 minutes at a time

Stop using machine if any noise or smell is noticed during operation

NEVER place anything over, or cover the Express Light in any way

Keep dust away from the Express Light

When the Express Light is not in use, always disconnect electrical plug from the power supply

Important Safety Instructions

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including:

READ ALL INSTRUCTIONS BEFORE USE | KEEP AWAY FROM WATER AND OTHER LIQUIDS

DANGER – TO REDUCE RISK OF ELECTROCUTION:

- ✎ **DO NOT** leave appliance plugged in for an extended period of time when not in use
- ✎ **DO NOT** place in, or drop into water or other liquid
- ✎ **DO NOT** reach for an appliance that has fallen into water. Turn off power supply and unplug immediately.
- ✎ **DO NOT** place or store appliance where it will fall or be pulled into a bath or sink
- ✎ Unplug before cleaning
- ✎ **DO NOT** use while bathing

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS

- ✎ **NEVER** leave appliance unattended when in use.
- ✎ **NEVER** block appliance air openings or place appliance on a soft surface such as a bed or couch, where the air openings might be blocked. Keep air openings free of lint, hair and dust.
- ✎ Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities.
- ✎ **NEVER** drop or insert any object into any opening of the appliance.
- ✎ Use this appliance only for its intended use as described in this guide. Do not use attachments not recommended by the manufacturer.
- ✎ **DO NOT** use outdoors or operate where aerosol spray products are being used.
- ✎ **NEVER** operate this appliance if it has a damaged cord or plug. To avoid a hazard, if power cord is damaged, it must be replaced by a qualified person only.

CAUTION – KEEP OUT OF REACH OF CHILDREN

- ↳ Individuals who are sensitive to light due to fair skin colour, or because of certain medications (Tetracyclines, Acutane, Sulfa medications etc) should exercise due caution during exposure to this or any other light source, whether UV or visible. Medical advice should always be sought prior to usage.
- ↳ Heat sensation can occur due to individual sensitivity, and thickness of gel applied. Pulling fingers away from light source for a few seconds will cease the exothermic (heat producing) reaction.
- ↳ If redness or burning results, discontinue use. Ultraviolet radiation from the sun or from a UV appliance can cause skin or eye damage.
- ↳ Skin may develop sunburn if overexposed.
- ↳ Appliance must not be used if the timer is faulty.
- ↳ To avoid a hazard, if power cord is damaged, it must be replaced by a qualified person only.

